

Make / Model:

SOP - This procedure covers maintenance & Safety requirements and applies to all employees and contractors working using tractors in the workplace

Purpose - To safely operate a Tractor, using Best Practice, follow safety guidelines, not cause risk or harm to operator, other people, animals, or surrounding environment.

This SOP cannot cover every possible scenario and should be used in conjunction with the manufacturer's instructions, WorkSafe, NZTA guidelines and the controls put in place using the hierarchy of controls.



Tractors are heavy and powerful machines. Every year people are injured or die when using or being near tractors on farm.

They can carry out a range of tasks depending on the implement that is being used but can cause substantial damage if not operated properly.

Modern tractors are fitted with seatbelts, and these must be worn when operating the tractor on farm and/or on road.


Windows must be clean enough for operator to see hazards from the driver's seat.

Make sure you select the right vehicle for the job – this may not be a tractor. Always check the preferred routes and "No Go" areas on farm before getting started.

TRACTOR HAZARDS

Potential rollover: Due to excess speed, terrain, towing, unstable loads, liquid loads, inadequate tires. Tractor handling affected by loads on front-end loaders and/or on 3-point linkages. Left and right foot brakes operating independently.	Loss of control: Loose items inside cab can get caught under brakes or around levers and/or other controls. Wear seatbelt to avoid being bounced from the seat and to maintain hand and foot control. NEVER carry a passenger unless there is special passenger seat
Physical injury: Death / broken bones/ crushed	Accidental starting: Remove the keys (if leaving Tractor unattended)
Drivers lack of skill: Practice at low speed before increasing speed or adding loads	Terrain: Watch for pivot ruts, slippery lane, hills, slopes & potholes
Collision: Operating in areas with other vehicles, people or blind spots.	Incident/ accident: Assess how bad injury is, get help ASAP, Follow Dr ABCD emergency procedure
Working alone or in isolation: Tell someone where you are working and estimate job times.	Overhead obstacles: Tractors are tall vehicles – be aware when driving under overhead cables, pivot irrigators and low sheds, especially when front-end loader is up.
Speed: Drive to conditions and abide by the speed limits set on your farm, these may vary from farm and yard and what implements are being used	Operator physical ability: Operator must be able to see over the dashboard, use brakes, gearing and other controls while seated and secured using the seatbelt.
Unauthorised access: Operator must be granted permission and be under supervision or fully trained	Poor maintenance: Tractor must be in good working order or Lock it out (red stickered).
Farm Specific Hazards:	

COMPULSORY PPE

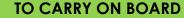





Wear hearing protection if working outside or if tractor cab is not sound-proofed









Fire Extinguisher



First Aid Kit

STOP

What you're doing?

THINK

About what could go wrong?

GO

Consciously & do it the safest way!



EMERGENCY EQUIPMENT / RESPONSE

Do we need emergency services? Dial 111

- GPS location: GPS co-ordinates
- Farm Rapid number; or Farm Name / Location
- First aider -
- First aid kit located -
- Fire-fighting equipment (only if safe to do so)
- Staff emergency contact details
- Response plan takes location into account
- Cell phone / RT Poor reception areas



Drs ABCD

- D-Danger, check safe to help
- **R**-Response, shout & tap patient on collar bone



- S-Send/shout for help Call 111 or another work mate
- **A**-Airways, head tilt chin lift (Do finger scoop of the mouth to make sure there is nothing in there)
- **B**-Breathing, look, listen, and feel. If not breathing commence CPR, if alone, go for help first
- C-Circulation/CPR, check for bleeding, if not breathing commence CPR 30 compressions/ 2 rescue breaths
- D- Defibrillation (AED), apply defibrillator if available and follow voice prompts. Nearest AED: (www.aedlocations.co.nz)

LICENCE REQUIRED

NEW ZEALAND DRIVER LICENCE DRIVING ENTITLEMENT INFORMATIO					
CLASS/ENDO	ISSUED	EXPIRES			
1	21-05-1980	21-12-2029			
2	16-08-2007	21-12-2029			
4L 98500	14-10-2008	21-12-2029			
6 6	21-05-1980	21-12-2029			

License required to drive on public road

Class 1

- Travel less than 40kph
- Less than 18Ton (tractor only)
- Less than 25TON (tractor & trailer)
- Tractor should be registered for road use but may carry exemptions

https://www.nzta.govt.nz/ass ets/resources/agri-vehicles-

<u>guide/Agricultural-vehicles-</u> <u>guide.pdf</u>

TRAINING REQUIRED

All staff regardless of years of experience must have been through a training assessment for this vehicle. Must be either passed as competent or supervised while in training.

Refer to informative training videos sutherlandonfarmsolutions.com

KEY OPERATING TIPS

Before starting the Tractor, check the following

- Ensure Tractor is the right vehicle for the job you are about to do. Would an alternative vehicle be better?
- Check your own state of mind (operating machinery requires your full attention) if you are fatigued or unwell let someone know.
- Climbing in or out of the tractor while facing the tractor, using footsteps and handholds and minimum of 3 points of contact.
- Never drive under the influence (Alcohol or illicit drugs) some medications can alter clarity.
- Identify **No-Go zones** and consider the best route to take.
- Remember, if seatbelts are fitted, they **MUST** be worn.

Owner's Manual

- Familiarise yourself with this document
- Tread depth (minimum 50% wear)
- Grease points and greasing intervals
- Controls (Orange, Black & Yellow)
- Service intervals (100 hours)
- Detailed Checks (Weekly/Monthly)
- Max front end loader lifting limits (????kg)
- Max loadings (non-braked implement must be less than 1.5 X gross weight of tractor and be attached to rated draw bar)



Implements shall be equipped with brakes if the maximum fully loaded weight is greater than 1500 kg (3307 lbs) and greater than 1.5 times the weight of the

Example: Implement mass is 1600 kg (3527 lbs) and towing unit mass is 1600 kg (3527 lbs), example implement is not required to have brakes.

Implements without brakes: Do not transport at speeds greater than 32 km/h (20 mph).

Implements with prakes

- If the manufacturer does not specify a maximum transport speed, do not tow at speeds greater than 40 km/h (25 mph).
- When transporting at speeds up to 40 km/h (25 mph) the fully loaded implement must weigh less than 4.5 times the towing unit weight.
- When transporting at speeds between 40—50 km/h (25—31 mph) the fully loaded implement must weigh less than 3.0 times the towing unit weight.



Road & Rail Crossings

- When crossing intersection, rail, road or exiting the farm come to a complete STOP, Look & listen
- Consciously make sure the way is clear then slowly continue.





No cell use when operating vehiles, <u>including Tractors</u> Stop to answer

or make calls

PRE-CHECKS - TCLOC Find something wrong at precheck? **DO NOT USE**.

- Always refer to Tractor Operating Manual for more information
- Position your tractor ready for safe inspection machine in neutral (N) or park (P) and/or handbrake on and any hydraulics/PTO in neutral/off
- During bird season leave bonnet up.
- Place the loader in supported raised position ready to do checks

Before starting tractor

- Check under bonnet (engine oil, water, birds' nests) I
- Back-end oil level









Now start tractor engine and then get out of tractor and start your 360° walk around checks this allows engine & fluids to warm up while carrying out pre-checks.

- Wheels check correct pressure (2.5 lugs contacting the ground), wheel nuts are tight, no objects rapped around CV's (wrap, wire etc) & mud guards secure.
- Loader pins secure and well-greased, look for damage loader & hoses
- Front Attachment is secure (pin in) hoses free from pinching & damage, grab & forks spikes are all tight
- Rear attachment Clips & pins located correctly, attachment point is rated for size of implement
- Windows clean so operators can see out and bystanders can see in. Clean windows reduce sunstrike.
- <u>Lights and Mirrors</u> check front and rear they are clean and are working

Now get into tractor seat/cab

- Check fuel gauge, level is sufficient for the task
- Remove or secure any loose items in cab (these can get caught under pedals and/or injure operator during sudden stop or rollover)
- Try the foot brakes and handbrakes (if fitted) one at a time. Make sure each brake, when applied, holds the Tractor. Wheel brakes must be locked together unless doing cultivation work or needing steering assistance when on hills
- Try each brake control and make sure each one flashes your brake light.
- Check that your horn works. Turn the key to the Light position, so headlights are on at all times (low beam unless high beam is required)
- Adjust the seat position so you can reach all the pedals and make sure you can operate hand controls when you sit comfortably on the seat
- Now clip in your seatbelt and check your surroundings before moving off.

Documented checks need to be completed a minimum of monthly, using paper tractor maintenance check sheet, once completed please take photo holding this completed check sheet up in front of your tractor and then uploading to Auditz.








CONTROLS

Speed recommendations

- Drive to conditions
- Max speed limit 30km in paddocks and lanes

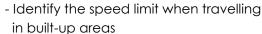



Operator Safety

- Doors closed (to prevent limbs getting caught or the door catching on something)
- Seatbelt worn (if tractor has one fitted)
- Hearing protection worn if cab is not sound-proofed
- Passengers only if passenger seat is fitted

Familiarise yourself with all the controls

Orange- Is movement forward & reverse, shuttle, hand & foot throttle, gear lever & rabbit/turtle

Yellow – Is power take off (Start/Stop buttoen) 540

& 540E or 1000 gear setting

Black – is hydraulics (Front end loader joy stick, 3 point linkage controller, rear hydraulic controls

Dashboard

- Make sure you understand indicators and symbols and what they mean – refer to Operators Manual
- Make sure dashboard screen and indicators are clean and easy to see.









Changing gear ratios, 2/4WD & Diff lock

- When shifting range (e.g. D to C or between high & low range, plus shifting into reverse) make sure you use your clutch and Tractor is stationary
- Low is good for towing heavy loads or when working on slopes
- Make sure you know how and when to use 2WD,
 4WD and to lock rear differentials (diff lock)



Lights ON

Position key to 'Lights' setting/light switch on – lights always on when engine is running. Run at 'low beam' during daylight (if that is an option)



Park Brake

- If the Tractor has a handbrake apply brake and click locking-device into place. Locking device retracts automatically by releasing button on end of brake handle.
- Some tractors do not have a handbrake machine should be left with gear lever in 'park' (P) position.

OPERATING TRACTORS


Refer to Owner's Manual and safety videos for information about safe use of these vehicles

https://sutherlandonfarmsolutions.com/series-20-tractors/



OPERATING TRACTORS ON PUBLIC ROADS



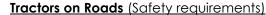

- Use Foot throttle only
- Foot brakes locked together
- Amber flashing light on
- Bonnet & taillights on low beam
- Loader low
- Seat belt on
- Flag over dimension tractor/implements (length and/or width)
- Carry drivers' licence (photo proof may help)




- Secure load and being aware objects may slide if not secured properly
- Do not tow a trailer or implements too heavy for the tractor. Stay within the manufacturer's guidelines.
- Make sure drawbar pin fits properly and is long enough for locking pin/clip to be fitted.
- Safety chain between trailing implement & tractor
- Make sure there is enough space to turn without catching rear wheel lugs on the trailer when turning



Forks positioning when on road

- Projections must be positioned to minimise the risk to other road users.
- Do an assessment based on the design of the vehicle, and the function and shape of the projecting parts.
- By crowning forks under and lowering the loader point of impact on car will activate air bags and crumple zone.
- Caution that turning sharp could spike your tire

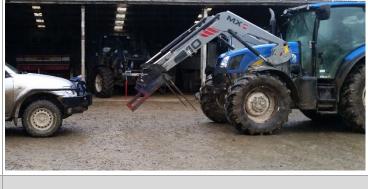



Front overhang (Standard sized vehicles)

- Front overhang is measured from the front edge of the driver's seat in the rear-most position to the front of the vehicle, flags or panels are required when over maximum distance of 4 meters.
- By positioning the loader & grab low the point of impact will activate air bags and crumple zone.



Width dimensions (Standard sized vehicles)

- Flags or panels must be reflective yellow with a reflective orange diagonal stripe when exceeding width of 2.55 meters.
- Note: Instead of displaying a hazard warning panel, an agricultural tractor with a width not exceeding
 3.1meters may instead be fitted with and use an amber flashing beacon when operated on a road.



CARRYING OUT THE TASK - PROCEDURE

Procedure

- Emergency Procedure in place
- Allow engine & fluids to warm up before driving off
- Be aware of 5 metre pedestrian exclusion zone
- When driving use the formed tracks as much as possible
- Drive at a speed slow enough to keep control over unexpected hazards
- Avoid slopes that are too steep for safe operation and go straight up or straight down any hills
- Engage 4WD when towing loads, in wet conditions and on hills, 2WD on flat terrain and on the road
- Avoid sudden stops or starts
- If the tractor has struck an obstacle, stop the tractor (and implement), and inspect it for damage.

<u>Traveling with loader</u>

- Check front hitch & attachment are pinned/secure
- Check the tractor's front-end loader has a rated lifting capacity. Counterbalance options may need to be implemented e.g. water in rear tires
- Keep the speed down when carrying a load.
- Travel with forks/bucket as low as practicable and where possible slightly tilted back
- Keep a clear view of the path of travel
- Ascend or descend grades slowly and with caution
- Make all turns smoothly

Notes

- Only start the tractor from the driver's seat
- Only operate levers from the driver's seat
- Never jump on or off moving tractor
- When idling listen for any different or unusual sounds
- If a pedestrian is closer than 5 metres to the tractor STOP THE TRACTOR until they have moved
- (Note: an exception to this could be if assistance is required to attach/hitch implements)
- Be aware of overhead hazards
- Keep away from ditches, holes or embankments which may collapse or have the potential for tractor to roll over
- Areas too steep for tractors to be identified as NO-GO ZONES
- When travelling or operating on a gradient maximize stability by keeping the centre of gravity of the load as low as possible



Safe Centre of Gravity of Load

Unsafe High Centre of Gravity of Load

COMPLETION OF TASK



Wash Tractor

- Wash Tractor according to farm policy and if there is excess mud or dirt on the tractor
- Complete detailed paper check (minimum monthly) and when completed hold check sheet up in front of tractor, take photo and load into Auditz

Care for the Tractor is part of the task

- Select flat/safe area to park Tractor (is it visible, not in danger of being hit by other vehicles)
- Position the loader, consider ease & safety when carrying out pre-check
- Turn your front wheels to make it easier to check engine oil in morning
- Select neutral gear (N), apply Park Brake and Turn off the Tractor
- Remove the keys (if leaving Tractor unattended)
- Cast your eye over the Tractor as you are moving away
- Always report any faults or damage to the Farm Manager immediately.
- Always report any incidents accidents or near misses.

ADDITIONAL NOTES

- Follow WorkSafe guide https://worksafe.govt.nz/topic-and-industry/farm-vehicles/tractors/safe-use-of-tractors-fs/
- Check out the NZTA guide https://www.nzta.govt.nz/assets/resources/agri-vehicles-guide/Agricultural-vehicles-guide.pdf



COMPETENCY ASSESSMENT AND SIGN OFF					
Use the template below to record date of training and 2 observations during different instances.					
Name of Participant:	Name of Participant: Tractor Make and model:				
Record of training/Observation: Tractor - Standard Operating Procedure					
Details	Name of person w	ho did training / Assessor	Date		
SOP Training					
Practical Training					
Note: The below competency assessment needs to be completed 2 weeks after the above SOP training					
Competency Assessing					
ASSESSOR QUESTIONS (please write in	n staff answers)		Completed		
Knows about farm safety rules involving tractors, including speed limits, emergency plans & nogo zones					
Demonstrate how to carry out visual pre-	start check				
Demonstrate to employer/manager	how to fill in detailed tracto	or maintenance check sheet			
Explained all the controls on Tractor (Orange, Black & Yellow)					
Explain licences required & safety requirements when driving on road around □ brakes, □ throttle, □ Lights, □ seat belts, □ loader positioning					
Looks well ahead keeping wide focus, uses side mirrors, picking best lines, with correct grip on steering wheel.					
Demonstrate knowledge and/or skills on how to safely reverse tractor					
Attaching and detaching implemen	t's □ front and/or □ rear				
Wears an approved Seat belt					
Uses the hand brake correctly or Park brake and then sets the tractor up considering safety and convenience in preparation for next morning pre-start checks					
Demonstrate safe techniques when dismounting the tractor					
Comments:					
SIGN OFF					
Participant Name:		Name of Trainer/Assessor:			
I have been taught the above S tand P rocedure for Tractors and agree to in it.		I have tested understanding with a Q&A as part of this training process and am confident there is a good understanding of the steps required for this S tandard O perating P rocedure			
Signature		Signature			
Date:	_	Date:			